

 
USER MANUAL

ECO ELECTRIC ERASER




ECOFUMIGATION.EU

1. Device Overview

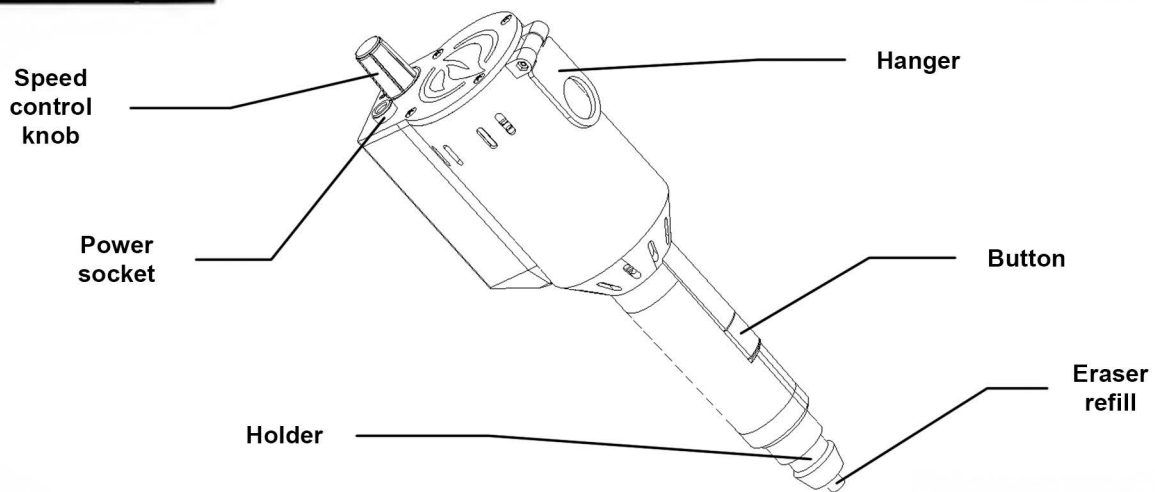

2. Speed Adjustment

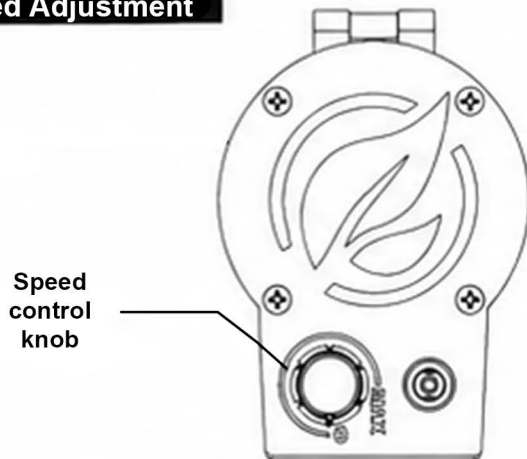



Speed Adjustment

The speed is adjusted smoothly using the control knob.

0 ↔ MAX

We recommend starting at a low speed and gradually increasing it according to the task being performed.

3. Eraser Refill Replacement

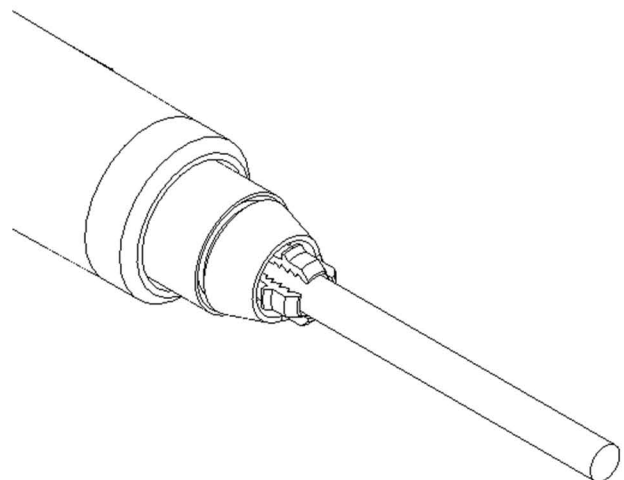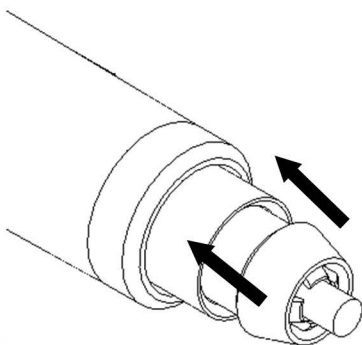

CAUTION!

Replace the eraser refill only when the power is switched off or the speed control knob is set to 0.

1. Pull the holder tip to release the grip
2. Remove the used eraser refill
3. Insert the new eraser refill
4. Release the tip

4. Intended Use

The electric eraser is designed for the precise removal of dirt, pencil marks, and other minor impurities from paper and archival materials. The device is intended for indoor use.



Before using the device, read this user manual carefully.

5. Technical Specifications

Model	Eco Electric Eraser
Wattage Pmax	30 W
Voltage	12 V DC
Current Rating	5 A
Eraser Refill Diameter	Ø 6 mm - 6,8 mm

6. Safety



Use only the 12 V DC power supply provided or recommended by the manufacturer.



Do not use the device in damp or wet locations or where it may be exposed to water.



Do not touch or hold the rotating parts of the eraser.



Before replacing the eraser refill, disconnect the power supply or set the speed control knob to position 0.



Do not leave the device unattended while it is operating.



The device is not intended for use by children.

7. Operating the Device

1. Connect the power supply to the power socket and then plug it into a 230 V mains outlet.
2. Set the speed control knob slightly above position 0.
3. Press the button to start the device.
4. Gradually increase the speed to a level appropriate for the task being performed.
5. Gently apply the eraser to the surface of the material. Do not apply excessive pressure, as too much pressure may damage the material.

8. Additional Notes

1. After use, clean the device of dust and eraser residue.
2. Do not use solvents or harsh chemicals.
3. Regularly check the condition of the eraser refill and replace it when necessary.
4. Store the device in a clean and dry place.

Manufacturer



Solution Box Sp. z o.o.
PL5223223834
Krótka 3b
05-090 Raszyn
Poland



ECOFUMIGATION.EU

NO TOXINS, NO CHEMICALS - IN HARMONY WITH NATURE



+48 603 054 338

agnieszka@cartapro.pl

cartapro.pl



For indoor use only.

Keep this manual for future reference.